# HANDLEBAR RISER KIT INSTALLATION INSTRUCTIONS

1. Take a marker and draw a line across the handlebar and handlebar clamp to be able to put your handlebars back to the current position.
2. With a T40 torque bit, remove the 4 bolts that hold on the upper handlebar clamps. (FIG 1)
3. Lift the handlebars up and out of the lower bar cradle/clamps.
4. With a T50 torque bit, remove the 2 bolts holding the lower bar cradle/clamps to the top triple clamp. These bolts are usually coated with a thread locking agent, so you may need to loosen and tighten them as you remove them to break up the thread locking agent. (FIG 2)
5. Remove the lower handlebar crandle/clamp.
6. Insert desired height risers between the lower handlebar cradle/clamps and upper triple clamp. (FIG 3)
7. Select the correct length supplied lower handlebar cradle/clamp bolts: For 5mm or 10 mm spacing use the supplied 40mm bolts. For 15mm and 20mm spacing use the supplied 50mm bolts.
8. Apply a few drops of red thread lock to each bolt that you are going to use. Insert bolts through the lower handlebar cradle/clamp, bar riser and thread in to the top triple clamp inserts using the supplied 8mm wrench. Torque the 2 bolts to the motorcycle manufactures specified torque.
9. Re-install handlebars in lower bar cradle/clamp. Make sure they are in the same position that you marked in step 1. Install upper handlebar clamps. Tighten mounting bolts to manufactures specified torque.
10. Have fun and enjoy your next ride.

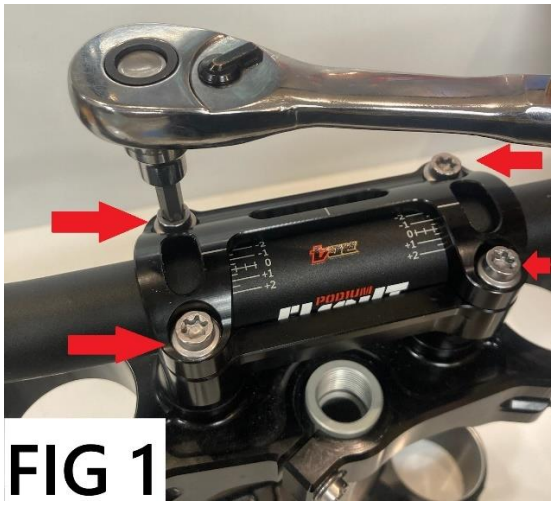
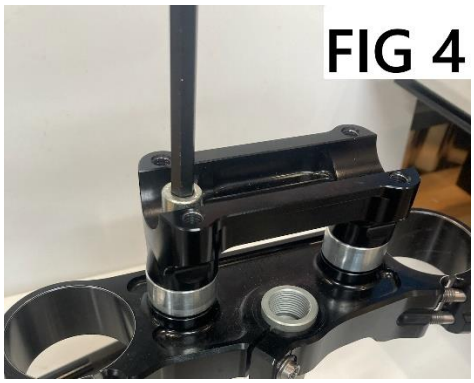

FIG 1


FIG 2


FIG 3


FIG 4

## WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician, Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after marker parts. EEI's customers must exercise good judgement in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI Products will void this limited warranty.) EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing as EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and the Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.

PART NUMBER: 23-2024
BAR RISER KIT INSTALLATION INSTRUCTIONS

*Quality Off-Road Motorcycle Products*
Enduro Engineering
enduroeng.com//517.393.2421//info@enduroeng.com